NUHEAT SIGNATURE



WIFI-ENABLED FLOOR HEATING THERMOSTAT NOW WORKS WITH NEST

HOME COMFORT



SAVE ENERGY











TECHNICAL SPECIFICATIONS

- · Resistive Load:
 - 1800 W max @120VAC (15 amp)
 - 3600 W max @240VAC (15 amp)
- · Dual-Voltage:
 - 120V/240V (incl. 208V)
- · Built-in GFCI
- · No battery required
- · 3-year manufacturer's warranty

SETUP AND SYSTEM REQUIREMENTS

Follow these simple steps on your NUHEAT SIGNATURE Thermostat and Nest to experience all the benefits this combination has to offer:

MyNuheat.com

- 1. Group your SIGNATURE Thermostats (even for a single SIGNATURE thermostat)
 - · Login to your MyNuheat.com account
 - · Select edit groups, new group

NUHEAT SIGNATURE Thermostat

- 2. Set SIGNATURE to Auto Mode
 - On the thermostat, select Setup/Preferences, Operating Mode, and ensure you are set to Auto Mode (default)
- 3. Activate all four setpoints on SIGNATURE (Wake/Leave/ Return/Sleep)
 - On thermostat, select Settings, Program/Schedule
 - · Set higher temperatures for WAKE and RETURN setpoints
 - Set lower temperatures for LEAVE and SLEEP setpoints*

*IMPORTANT: At minimum, SLEEP setpoint in each day's schedule should be active and set to a lower temperature than the WAKE setpoint.

Nest Thermostat

4. Nest Sense™ Auto-Away feature is enabled

MyNuheat.com

- 5. Access Works With Nest Feature and begin setup
 - Login to your MyNuheat.com account, select Account Settings, Connect to Nest and follow instructions

For specifications and more information about the NUHEAT SIGNATURE thermostat, please visit www.nuheat.com

North America

Tel +1.800.545.6258 Fax +1.800.527.5703 thermal.info@nvent.com



Our powerful portfolio of brands:

TRACER